



INDEX

Numerics

4xDMT

- faceplate [1-14](#)
- features [1-13](#)
- installing [6-7](#)
- LEDs [1-14](#)
- specifications [A-3](#)
- troubleshooting [5-10](#)

4xDMT over ISDN

- faceplate [1-16](#)
- features [1-15](#)
- installing [6-7](#)
- LEDs [1-16](#)
- specifications [A-4](#)
- troubleshooting [5-10](#)

4xflexi

- faceplate [1-18](#)
- features [1-17](#)
- installing [6-7](#)
- LEDs [1-18](#)
- specifications [A-4](#)
- troubleshooting [5-10](#)

4xSDSL

- faceplate [1-20](#)
- features [1-19](#)
- installing [6-7](#)
- LEDs [1-20](#)
- specifications [A-5](#)
- troubleshooting [5-10](#)

8xDMT

- faceplate [1-22](#)
- features [1-21](#)

installing [6-7](#)

LEDs [1-22](#)

specifications [A-6](#)

troubleshooting [5-10](#)

8xDMT over ISDN

- faceplate [1-24](#)
- features [1-23](#)
- installing [6-7](#)
- LEDs [1-24](#)
- specifications [A-7](#)
- troubleshooting [5-10](#)

8xG.SHDSL

- faceplate [1-26](#)
- features [1-25](#)
- installing [6-7](#)
- intermixing [1-28](#)
 - 12.1(7)DA2 [1-28](#)
 - 12.2(1b)DA [1-28](#)
 - 12.2(5)DA [1-28](#)
- LEDs [1-26](#)
- specifications [A-7](#)
- troubleshooting [5-10](#)

A

air filter

cleaning [6-4](#)

removing [6-3](#)

replacing [6-4](#)

required tools and equipment [6-2](#)

alarms

BITS clock [5-17](#)

card slots [5-17](#)

chassis alarms [5-17](#)

connecting [3-13, 4-12](#)

E1 interface [5-19](#)

E3 interfaces [5-18](#)

fan tray [5-21](#)

IMA

group [5-20](#)

link network interface [5-19](#)

IOS Controller [5-17](#)

line cards [5-17](#)

management software [1-49](#)

OC-3c interfaces [5-18](#)

PEM [5-21](#)

redundancy [5-20](#)

T1 network interface [5-19](#)

troubleshooting [5-17](#)

altitude requirements [2-12](#)

attaching power connections [3-9, 4-9](#)

auxiliary port

connecting [3-21, 4-20](#)

pin assignments [C-4](#)

B

blank faceplates, installation [3-6, 4-6](#)

C

cabling guidelines [B-1](#)

caution definition [xv](#)

Cisco 6260

card slot assignments [1-11](#)

card slots [1-12](#)

champ connectors [1-13](#)

features [1-3](#)

Cisco 6260 chassis

installation with a POTS splitter [3-5](#)

installation without a POTS splitter [4-5](#)

Cisco IOS definition [1-49](#)

console port pin assignments [C-4](#)

contacting Cisco TAC, see troubleshooting

D

documentation

related [xv](#)

DS3+T1/E1 IMA NI-2 card

faceplate [1-33](#)

features [1-32](#)

installing [6-13](#)

redundancy [1-39](#)

removing [6-14](#)

specifications [A-9](#)

subtending [1-9](#)

troubleshooting [5-8](#)

DS3/2DS3 NI-2 card

faceplate [1-31](#)

features [1-30](#)

installing [6-10](#)

redundancy [1-39](#)

removing [6-12](#)

specifications [A-8](#)

subtending [1-7](#)

troubleshooting [5-8](#)

DSL connector pin locations [C-1](#)

E

E1 I/O module

connecting the E1 subtending network
configuration [3-19, 4-18](#)

network connection installation [3-16, 4-15](#)

network interface alarms [5-19](#)

troubleshooting [5-14](#)

E3 I/O module

features [1-41](#)

network connection installation [3-15, 4-14](#)

troubleshooting **5-14**
 electrostatic discharge, preventing **2-9**
 environmental requirements
 space **2-13**
 temperature, altitude, and humidity **2-12**
 ventilation **2-12**
 ESD jack location **1-48**
 Ethernet
 connect to management network **3-20, 4-19**
 pin assignments **C-5**

F

fan tray
 features **1-47**
 illustration **1-47**
 maintenance **6-2**
 removing and replacing **6-4**
 specifications **A-12**
 troubleshooting **5-15**

G

general maintenance guidelines
 hot swapping cards **2-10**
 hot swapping modules **2-10**
 installation and replacement suggestions **2-11**
 guide contents, description **xiii**

H

hardware specifications, see specifications
 hot swapping
 cards **2-10**
 modules **2-10**
 troubleshooting **5-1**
 humidity requirements **2-12**

I/O module
 connectors **C-1**
 installing **6-18**
 removing **6-19**
 specifications **A-11**
 troubleshooting **5-14**
 wire-wrap pin mapping **C-3**
 wire-wrap pins **1-44, C-3**
 wire-wrap pins illustration **1-44**

IMA
 configuration **1-4**
 definition **1-4**
 group alarms **5-20**
 link network interface alarms **5-19**
 initial configuration **3-22, 4-21**
 inspecting for damage **2-18**
 installation and replacement suggestions
 general maintenance guidelines **2-11**
 installation checklist
 with a POTS splitter **3-2**
 without a POTS splitter **4-2**
 installation procedures
 with a POTS splitter **3-3**
 without a POTS splitter **4-2**
 installation tools and equipment **2-16**
 installation with a POTS splitter
 apply power **3-14**
 attach ear brackets **3-4**
 attach power connections **3-9**
 blank faceplates **3-6**
 checklist **3-2**
 Cisco 6260 chassis **3-5**
 connect a console terminal **3-21**
 connecting the E1 subtending network
 configuration **3-19**
 connecting the OC-3c subtending network
 configuration **3-20**

connect the alarm contacts **3-13**
 connect the auxiliary port **3-21**
 connect the Cisco 6260 to the third-party POTS splitter **3-9**
 connect the Ethernet to the management network **3-20**
 E1 network connection installation **3-16**
 E3 network connection **3-15**
 ground the Cisco 6260 and the third-party POTS splitter **3-7**
 initial configuration **3-22**
 installing a subtended network configuration **3-18**
 OC-3c network connection installation **3-17**
 procedures **3-3**
 stabilize and measure rack space **3-3**
 verify fan tray operation **3-15**
 installation without a POTS splitter
 apply power **4-13**
 attach ear brackets **4-4**
 attach power connections **4-9**
 blank faceplates **4-6**
 checklist **4-2**
 Cisco 6260 chassis **4-5**
 connect a console terminal **4-20**
 connecting the E1 subtending network configuration **4-18**
 connecting the OC-3c subtending network configuration **4-19**
 connect the alarm contacts **4-12**
 connect the auxiliary port **4-20**
 connect the Cisco 6260 to the MDF **4-8**
 connect the Ethernet to the management network **4-19**
 E1 network connection installation **4-15**
 E3 network connection **4-14**
 ground the Cisco 6260 **4-7**
 initial configuration **4-21**
 installing a subtended network configuration **4-17**
 OC-3c network connection installation **4-16**
 procedures **4-2**
 stabilize and measure rack space **4-2**
 verify fan tray operation **4-14**

intermixing
 G.SHDSL guidelines
 Release 12.1(7)DA2 **1-28**
 Release 12.2(1b)DA **1-28**
 Release 12.2(5)DA **1-28**
 intermixing line cards **1-27**
 IOS controller alarms **5-17**

L

LEDs
 4xDMT **1-14**
 4xDMT over ISDN **1-16**
 4xflexi **1-18**
 4xSDSL **1-20**
 8xDMT **1-22**
 8xDMT over ISDN **1-24**
 8xG.SHDSL **1-26**
 PEM **1-46**

line cards
 4xDMT **1-13**
 4xDMT over ISDN **1-15**
 4xflexi **1-17**
 4xSDSL **1-19**
 8xDMT **1-21**
 8xDMT over ISDN **1-23**
 8xG.SHDSL **1-25**
 intermixing **1-27, 1-28**
 troubleshooting **5-10**

M

management software
 alarms **1-49**
 Cisco IOS **1-49**
 specifications **A-12**

N

network clocking **1-39**

NI-2 cards

DS3+T1/E1 IMA NI-2 card **1-32**

DS3/2DS3 NI-2 card **1-30**

OC-3c/OC-3c NI-2 card **1-35**

troubleshooting **5-8**

note, definition **xv**

O

OC-3c/OC-3c NI-2 card

faceplate **1-37**

features **1-35**

installing **6-16**

redundancy **1-39**

removing **6-17**

specifications **A-10**

subtending **1-10**

troubleshooting **5-8**

OC-3c I/O module

connecting the OC-3c subtending network
configuration **3-20, 4-19**

illustration **1-43**

network connection installation **3-17, 4-16**

troubleshooting **5-14**

P

PEM

alarms **5-21**

faceplate **1-46**

features **1-45**

installing **6-20**

LEDs **1-46**

removing **6-22**

specifications **A-11**

troubleshooting **5-16**

pin assignments

auxiliary ports **C-4**

console port **C-4**

Ethernet port **C-5**

port mapping table **B-2**

POTS splitter

connect the third-party POTS splitter to the Cisco
6260 **3-9**

power requirements **2-14**

preventing electrostatic discharge **2-9**

Q

quadrants

intermixing **1-28**

R

rack-mounting **2-15**

rack space calculation **2-14**

redundancy

alarms **5-20**

APS link **1-40**

NI-2 cards **1-39**

overview **1-39**

subtended configurations **1-41**

troubleshooting **5-9**

required tools and equipment **2-16**

S

safety requirements

preventing electrostatic discharge **2-9**

safety guidelines **2-1**

specifications

4xDMT **A-3**

4xDMT over ISDN **A-4**

4xflexi **A-4**

4xSDSL **A-5**

8xDMT [A-6](#)
8xDMT over ISDN [A-7](#)
8xG.SHDSL [A-7](#)
DS3+T1/E1 IMA NI-2 card [A-9](#)
DS3/2DS3 NI-2 card [A-8](#)
fan tray [A-12](#)
I/O module [A-11](#)
management software [A-12](#)
OC-3c/OC-3c NI-2 card [A-10](#)
PEM [A-11](#)
stabilize and measure rack space [3-3, 4-2](#)
standard telco color chart [B-6](#)
subtended network configuration
 DS3+T1/E1 IMA NI-2 cards [1-9](#)
 DS3/2DS3 NI-2 cards [1-7](#)
 OC-3c/OC-3c NI-2 cards [1-10](#)
redundancy [1-41](#)
subtending
 E1 subtending configuration
 illustration [4-18](#)
 E3 subtending configuration
 illustration [4-17](#)

PEM [5-16](#)

U

unpacking the system [2-18](#)

V

verifying contents [2-18](#)

W

warning definition [xv](#)
wire-wrap pin mapping for I/O modules [C-3](#)
wire-wrap pins
 I/O module [1-44](#)
 pin assignments [1-45](#)
wire-wrap pins illustration [1-44](#)

X

xTU-C line cards
 installing [6-7](#)
 removing [6-9](#)

T

T1 network interface alarms [5-19](#)
temperature requirements [2-12](#)
timesaver, definition [xv](#)
tip, definition [xv](#)
troubleshooting
 alarms [5-17](#)
 basic checks [5-2](#)
 contacting the Cisco TAC [5-2](#)
 fan tray [5-15](#)
 hot swapping [5-1](#)
 I/O module problems [5-14](#)
 line cards [5-10](#)
 NI-2 card problems [5-8](#)
 NI-2 redundancy [5-9](#)